

LED Product Information and Warnings

Important

- **Always disconnect the power before installing or replacing parts and before cleaning or other maintenance.**
- **Consult a qualified, licensed electrician to ensure correct branch circuit conductor.**
- Please read all included assembly instructions and warnings carefully before installation. Contact Customer Service if you have any questions or concerns. Before installation, please confirm that the fixture is compatible with your supply voltage and dimming system, if present.
- LEDs are highly sensitive electronic devices, and must be treated with care. Do not open any factory sealed compartments, and avoid touching the LEDs with your hands or any object.
- Although all our fixtures are equipped with protective devices, LED fixtures are vulnerable to power surges and supply variations. Do not install LED fixtures on the same circuit as any motors, appliances, or HVAC systems.
- Do not remove or bypass any LED Driver or Transformer that is provided with the fixture, and do not replace or substitute with another power supply.
- Remote LED Driver or Transformer installation must be done by a licensed electrician and in accordance with local codes. Remote installations should be in an accessible location, as close to the fixture as possible.
- Fixtures must be wired in parallel on independent leads; do not "daisy chain" multiple fixtures together or wire them in series.
- All factory-made splices and connections must remain intact. LED circuits are carefully designed and built, and improper connections may damage the fixture.
- The ends of coaxial pendant cords have been precisely stripped and split at the factory and must not be field cut. Excess cord or cable should be neatly coiled and reserved in the fixture canopy.
- Any mounting hardware is provided for your convenience and should be used with discretion. Always use the appropriate hardware for the mounting surface.

Assembly Instructions

INSTRUCTIONS D'INSTALLATION

Light Chimes Series - 24" LED Pendant, 32" LED Pendant

3015.XX-24, 3015.XX-32

Important

- Always disconnect the power before installing or replacing parts and before cleaning or other maintenance.
- Consult a qualified, licensed electrician to ensure correct branch circuit conductor.
Consulter un électricien qualifié pour vous assurer que les conducteurs de la dérivation sont adéquats.

1. Shut off power to the outlet box (A).
2. Feed the cord through the canopy (B), canopy (C), nipple (D), and three holes on cord lock (E) as shown in the drawing.
3. Determine the height at which the fixture (F) is to be hung. Adjust the cord lock (E) to set the cord length.
4. Make appropriate electrical connections using wire nuts:
 - a. Connect the transformer's (G) output wire (red) to the fixture's input wire (red, inner conductor).
 - b. Connect the transformer's the other output wire (red) to the fixture's input wire (black, outer conductor).
5. Reserve extra cord in the canopy (C).
6. Make appropriate electrical connections using wire nuts:
 - a. Connect the transformer's (G) live wire (black) to the outlet box (A) live wire.
 - b. Connect the transformer's neutral wire (white) to the outlet box neutral wire.
 - c. Connect the fixture's ground wire (green or uncoated) to the outlet box ground wire.
 - d. Carefully place connections and transformer in the outlet box (A).
7. Attach the cross bar (H) to the outlet box (A), secure with outlet box screws (J).
8. Attach canopy (C) to nipple (D), secure with the canopy nut (B).
9. Restore power to the outlet box (A).

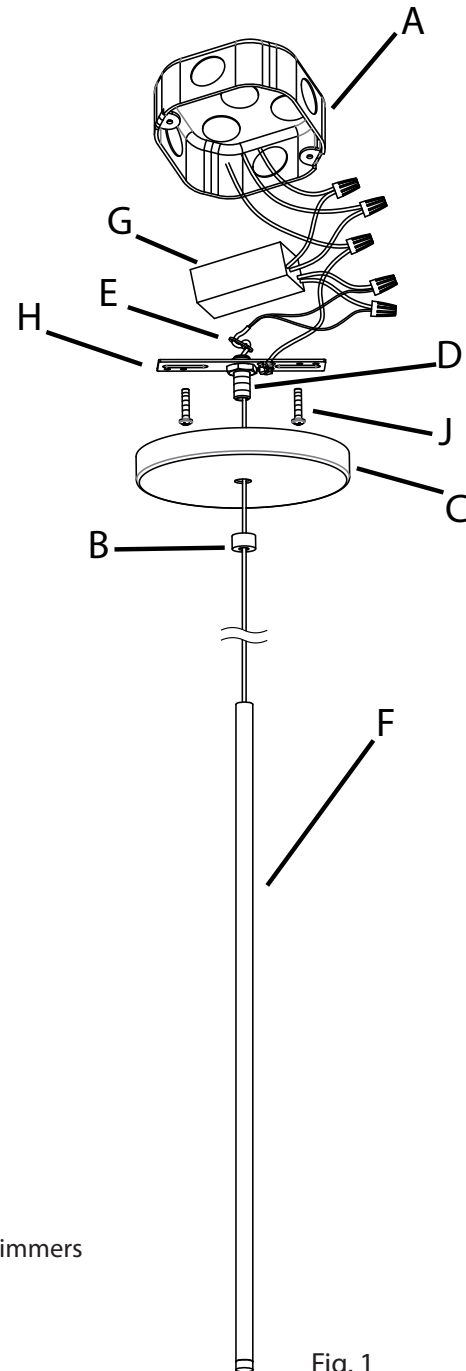


Fig. 1

3015.XX-24,
3015.XX-24-J20



3015.XX-32,
3015.XX-32-J20



Note:

- The outlet box must be at least 4" DIA and 1.5" deep to fit the transformer.
- This fixture is dimmable with Electronic Low Voltage (Trailing-Edge) type dimmers only.

Care Instructions:

- Dusting: Use a clean, dry cloth.
- Cleaning: To protect the finish, avoid any harsh abrasives or chemicals.