


Important: Always unplug the power cord before installing or replacing bulb and before cleaning or other maintenance.

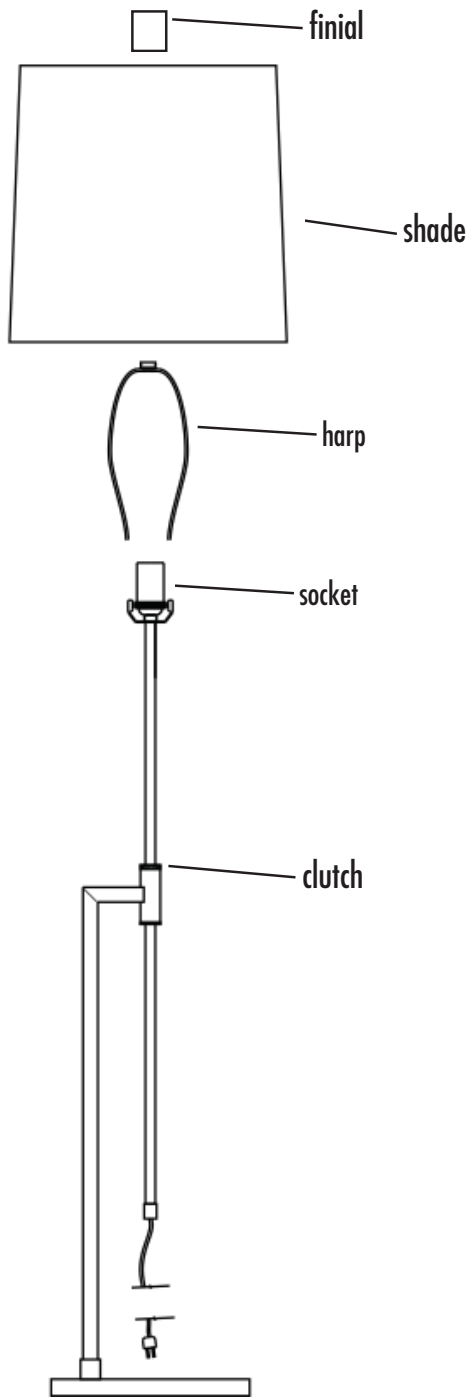

LAMP ASSEMBLY

1. Place and insert harp on socket.
2. Place shade on harp.
3. Secure with finial.

HEIGHT ADJUSTMENT

1. To increase height of lamp, loosen the Clutch and carefully pull up on the Upper Stem. Tighten the Clutch once lamp is at desired height.
2. To decrease height of lamp, loosen the Clutch and carefully push down on the Upper Stem while gently pulling the power cord free from the Lower Stem. Tighten the Clutch once lamp is at desired height.