
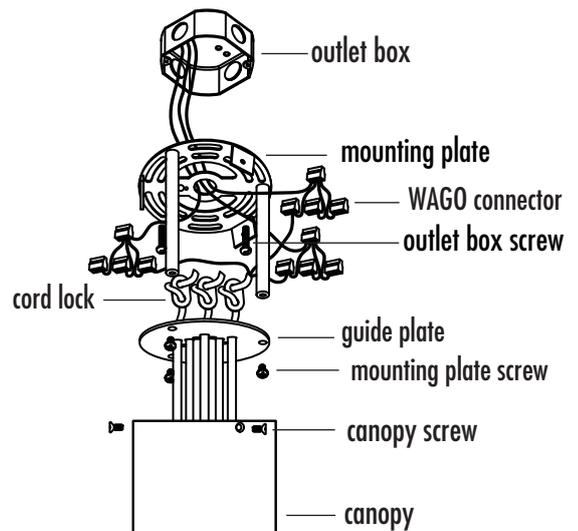


Important: Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance.

This light should be installed by a licensed electrician

LAMP INSTALLATION AND ASSEMBLY



1. Shut off power to the outlet box. (fig. A)
2. Remove the zip-tie.
3. Determine the height at which the fixture is to be hung. Set the adjustable cords to the desired length and, cut cords to length plus several inches. Adjust the cord locks in canopy to prevent slippage.
4. Strip the end of wire, and insert the wires into WAGO connectors. (black to black, white to white, green to green.)
5. Attach the mounting plate to the outlet box, secure with outlet box screws.
6. Attach the guide plate to the mounting plate, secure with mounting plate screws.
7. Make appropriate electrical connections using WAGO connectors:
 - a. Connect the fixture's live wire (black) to the live outlet box wire.
 - b. Connect the fixture's neutral wire (white) to the neutral outlet box wire.
 - c. Connect fixture's ground wire (green or uncoated) to the ground outlet box wire. If no ground is present in outlet box, connect fixture's ground wire to the mounting plate using the green screw (included).
 - d. Carefully place connections in outlet box.
8. Install 60W E12 Candelabra base bulbs. (not included)
9. Screw the glasses to the socket cups.
10. Remove the slack in the power cords by feeding the excess into the canopy and adjust the cord locks.
11. Attach canopy to mounting plate, secure with canopy screws.
12. Adjust the spring ring to desired position.
13. Restore power to the fixture.

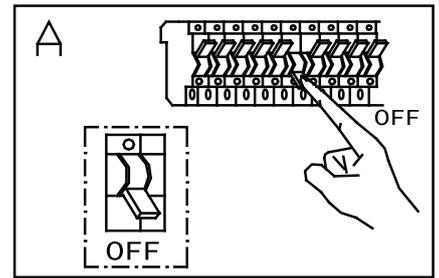

CARE INSTRUCTIONS

- Dusting – Use a clean, dry cloth.
 Cleaning – To protect the finish, avoid any harsh abrasives or chemicals.

**For half-mercury glass version –
 To avoid damage, do not touch
 the mercury finish on inside of glass.**

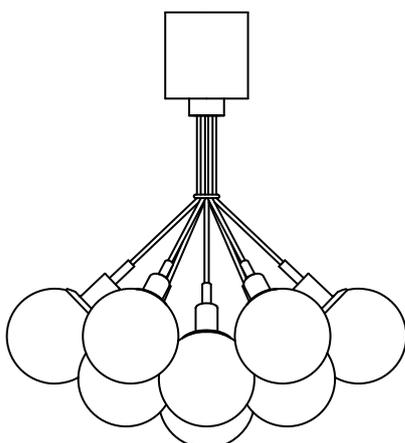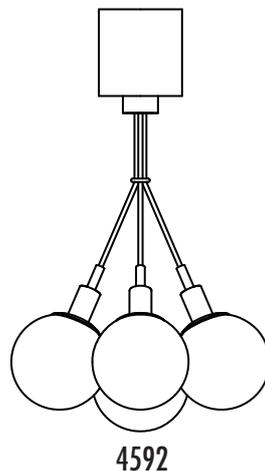

4593

