


Important: Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance.

Assembly & Installation Instructions


1. Attach the bracket to wood legs by placing bracket on the slot on wood leg, tighten with long wood screws.
2. Place the stem with splice box on bracket, using the wrench to tighten the hex nut. Screw on the round nut to cover the hex nut.
3. Place the tri-bracket in notch on wood legs, tighten with short wood screws.
4. Install 100w medium base bulbs. (not included).
5. Place shade on shade holder by inserting the shade rod into slot on shade holder.
6. Plug in the cord and the dimmer switch is located on splice box.

CARE INSTRUCTIONS

- Dusting – Use a clean, dry cloth.
 Cleaning – To protect the finish, avoid any harsh abrasives or chemicals.

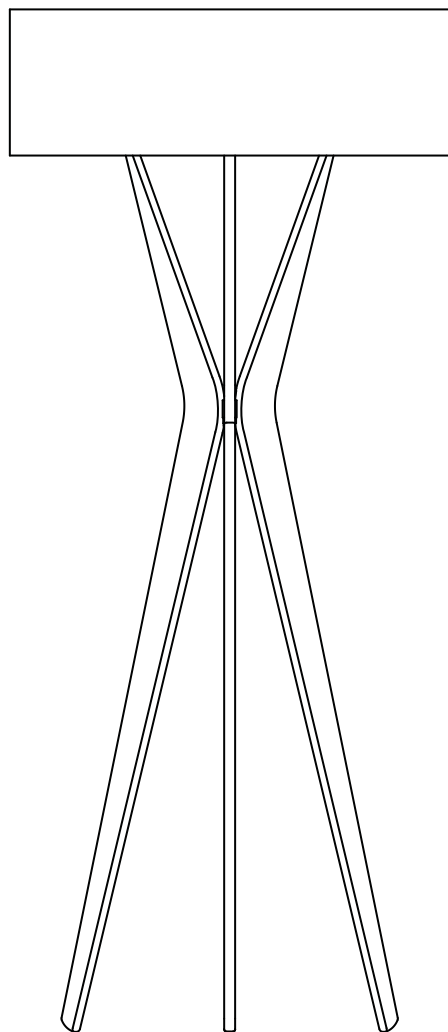

6152

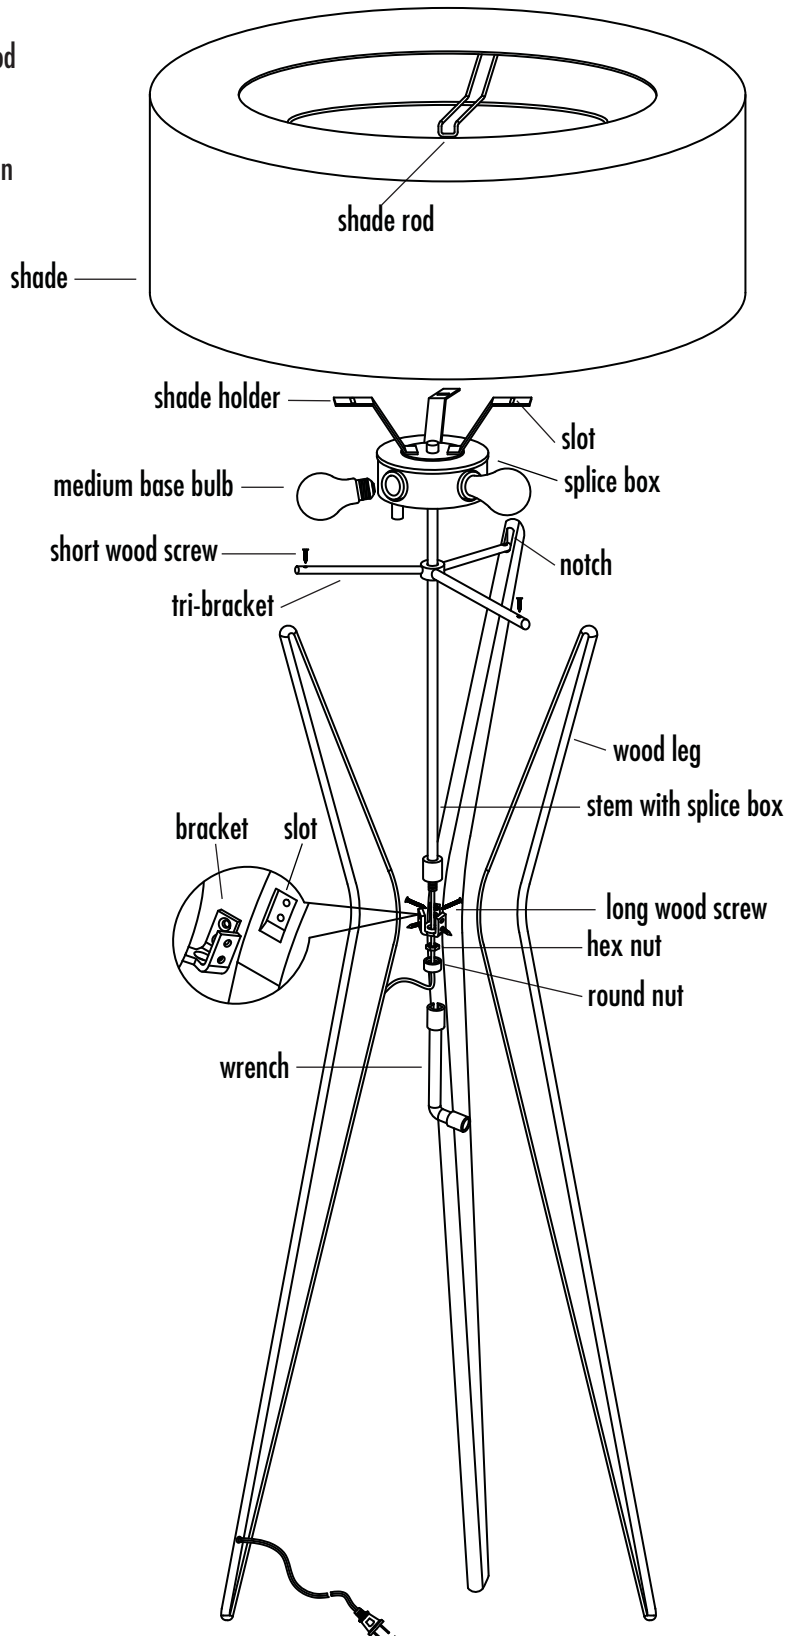

6151